

## Operating the Model 205 AutoSpeed Programmer

The AutoSpeed Programmer is used to configure the Model 150 Controller for a particular type of speed input. In addition, there is a switch to set sensors for remote standby (Lift Switch) mode.

1. With the Controller OFF, connect the AutoSpeed programmer to the 9-pin port on the side of the controller. Turn on the Controller.
2. Turn on the controller and wait for warm-up to complete.
3. Using the UP/DN toggle switch, select the speed source (usually a type of radar).
4. Set the Mode switch to Bypass, unless the system is configured for a remote standby switch.
5. Press the LOAD button to download the configuration to the Controller (about 1sec). The Power LED will blink rapidly to indicate that it received the signal successfully.
6. Turn off the Controller and disconnect the AutoSpeed Programmer. Process is complete.



740 South State Street Ukiah, CA 95482

tel 707-467-3747 fax 707-467-3750

toll-free 888-728-2436

**[www.ntechindustries.com](http://www.ntechindustries.com)**