


Quick Start Setup for Hardi Nova Rate Controller

1. Power on the Nova.
2. Push “Enter” key on Nova and use “Arrow” keys to select blinking “Printer” icon.



3. Push “Enter” key again, 4th row of display will be blinking, use “Up Arrow” key to display GPS.

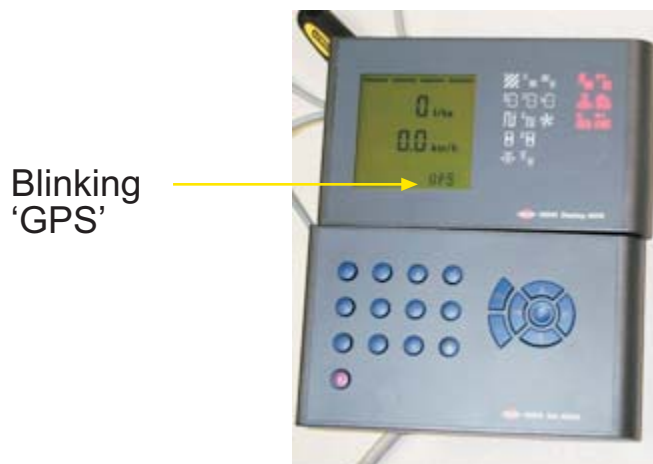

4. Push “Enter” key again.

Set number shown before GPS with “Up Arrow” key to display 1.

Display - '1'



5. Push “Enter” key again. Use “Up Arrow” key to display RS232.

Display - 'RS232'



6. Push “Enter” key again. Set number shown before RS232 with “Up Arrow” key to display 3.
(9600 baud)


Display - '3'



7. Push “Enter” key again. Then hit “Escape” key twice to return to normal operation. The “Set Application Rate” red icon will be “on.”



8. Push “Enter” key again to have the display screen show the ‘l / ha’ amount.

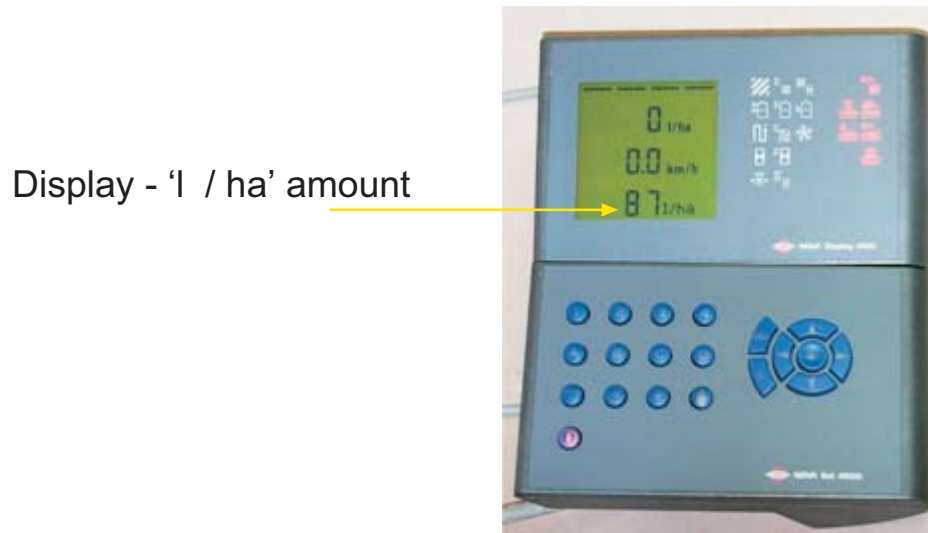

Set up the GreenSeeker RT200 with the Rate Controller set up to “Hardi International” (see RT200 manual for details) to an application job that will give a rate command to the Nova. When you tap on the GO button, the target rate shown on the GreenSeeker should now show on the Nova display. If you use blue jeans, vegetation or other materials to change the NDVI under the GreenSeeker sensors you will see the Target Rate Change on the GreenSeeker and the Nova.

Push “Escape” key to return to “working mode” on the Hardi Nova display screen. The GreenSeeker will now control the application rate as you apply with the sprayer.

NOTE: Hardi Nova Software ver. 7.05 and later will send an “as applied” note back to GSRT200. Software ver. 7.04 and earlier does not.